

Precise Linear Motion Components for Small-Scale Applications





Lead Screws to Meet Today's Design Challenges

As the demand for increasingly compact devices grows within various industries, the need for ever smaller components has grown with it. To help engineers meet these stringent design requirements, the Thomson line of miniature lead screws delivers the linear motion precision you've come to know from our lead screws with diameters as small as two millimeters.

Big Precision in a Little Package

With these miniature lead screws, Thomson enables engineers to achieve designs once considered impossible. Devices that traditionally could not be made portable or mobile can now be reduced in size and weight without having to compromise precision, life or function.

In addition to being small, Thomson miniature lead screws are configurable, customizable and lean. They are part of an extensive product offering of standard screws and nuts that allow for an easily configurable

solution for many small-scale or space-constrained applications. Miniature lead screws are customizable in that Thomson can create unique designs outside of the standard offering. Finally, their smaller footprint helps reduce the environmental impact of the end product simply due to the removal of every unnecessary gram of mass.



Revolutionary Anti-Backlash Design

Thomson miniature lead screws offer the option of one of the world's smallest anti-backlash nuts, which is designed to add minimal size and weight to the overall lead screw assembly. The anti-backlash nut is specifically designed for optimal performance at a miniature scale. This technology eliminates any clearance between the lead screw and lead nut threads while also compensating for thread wear developed via normal operation.



Quick-Mounting Integrated Coupler

The all-new integrated coupler design allows end-users to easily mount their Thomson miniature lead screw using only basic hand tools. Simply insert the required mating shaft in the coupler and torque down the lock nut for a secure and accurate connection.



Configurability

Thomson offers the industry's most comprehensive small-scale lead screw product line, consisting of various lead screw diameter and lead options, lead nut geometries and backlash types, as well as many standard lead screw end configurations.



Customization

Whether a custom lead nut, modified lead screw or a completely new, complex modification is required, Thomson engineers can work with you to provide a solution that is tailor-made to your design needs. Common customization options include end machining, special coatings, unique nut design and end configurations, and more.






Miniature Lead Screws at a Glance

When it comes to your small-scale linear motion applications, choosing the ideal miniature lead screw can help optimize performance and life expectancy. That's why Thomson offers several configuration options. Which miniature lead screw is best for your next design?



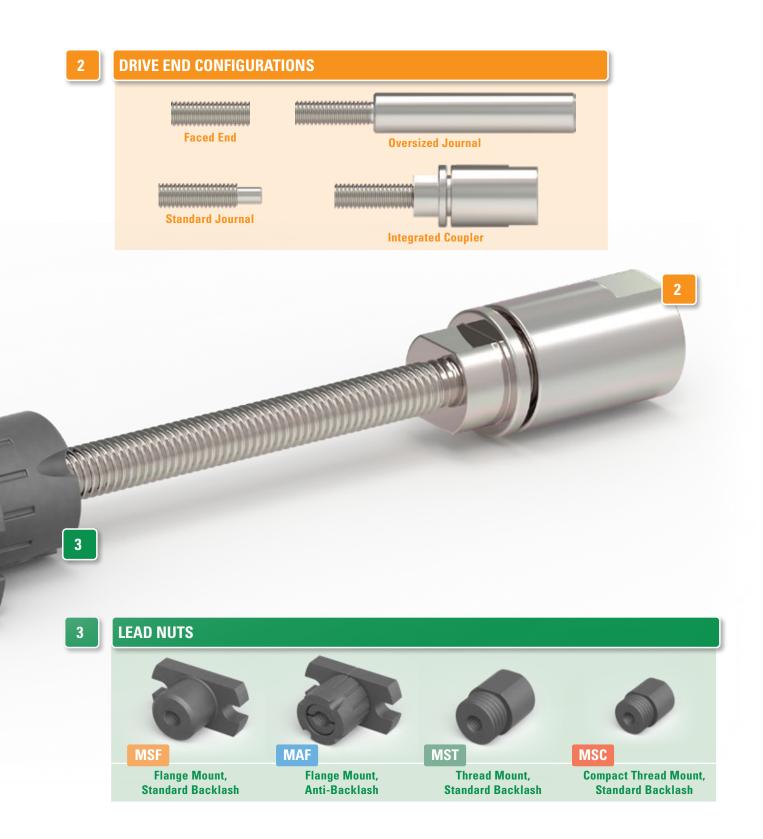





Application Examples

Thomson miniature lead screws and nuts provide a high level of quality and precision in a compact envelope, affording engineers newfound flexibility when designing for a variety of applications.

Handheld Pumping Device

Precision lead screws are already commonly used as drive mechanisms in pumping devices today. However, due to their small form factor, Thomson miniature lead screws are perfect for incorporating into smaller, handheld pumping devices such as the insulin pump shown here.

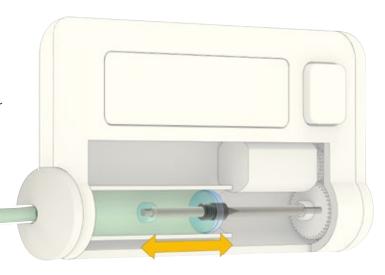

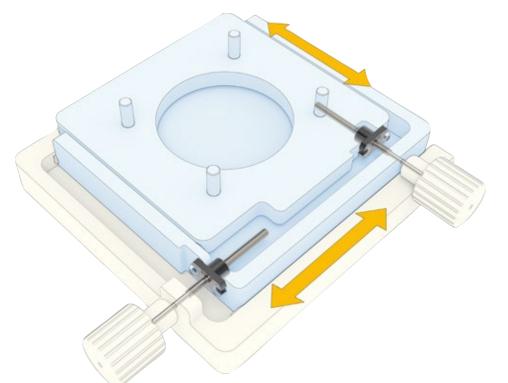


Microscope XY Stage

For optimal focus, microscope stages often require very small and precise planar movements. Miniature lead screws can aid in delivering these movements, while taking up minimal space thanks to their compact and unobtrusive form factor.

Micro Gripper

Robotic applications utilizing a gripper cater to many industrial tasks such as pick-and-place, material handling and test tube instrument holders. For smaller, precise micro-gripping mechanisms, Thomson miniature lead screws, in combination with a motor, can be the perfect linear drive mechanism.

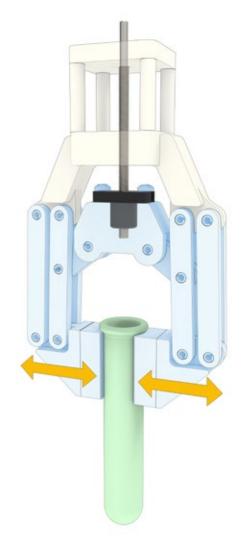


Handheld Examination Device

Medical devices continue to improve over time. These design iterations allow for easier use, better quality and faster diagnoses. One example is a smaller footprint found in the handheld ear scanning device shown here. Smaller medical devices like this can benefit from Thomson miniature lead screws in their design application.



Ordering Key

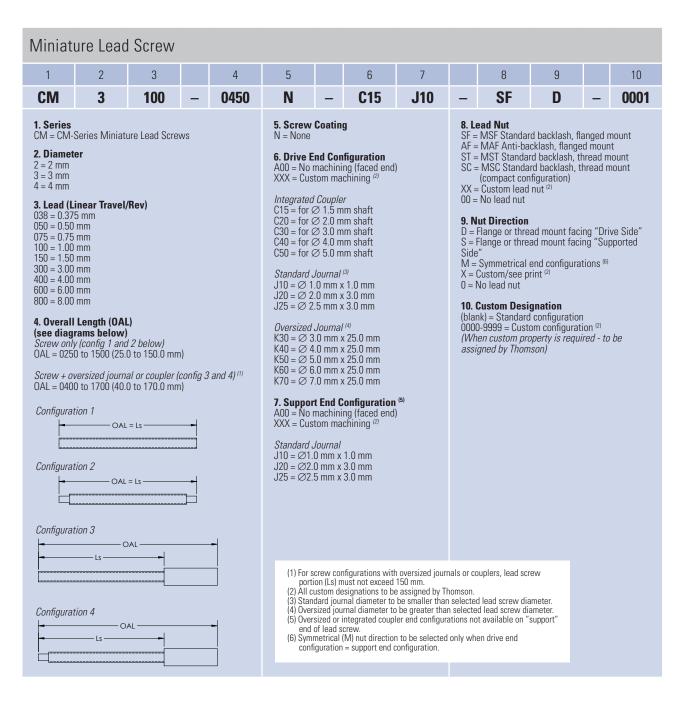

Lead Screws P	Lead Screws Product Availability								
Diameter [mm]		Lead [mm]							
	0.375	0.5	0.75	1	1.5	3	4	6	8
2	•		•		•	•			
3		•		•		•		•	
4				•			•		•

For all other lead screw availability, please see standard lead screw catalog. For any custom diameter and/or leads, please contact Thomson customer support for more information.

Specifications

Basic Specifications							
Lead Screw		2 mm	3 mm	4 mm			
Major diameter	[mm]	2	3	4			
Lead accuracy	[mm/mm (in/in)]	0.0005 (0.0005)					
Straightness	[mm (in)]		0.05 (0.002)				
Thread direction			right hand				
Max. screw length (1)	[mm (in)]		150 (5.9)				
Max. speed (2)	[RPM]		1000				
Max. input torque integrated coupler	[N-m (oz-in)]		1.1 (150)				
Material			stainless steel				
Weight	[mg/mm (oz/in)]	26 (0.02)	40 (0.04)	70 (0.06)			
Lead Nut		2 mm	3 mm	4 mm			
Drag torque for standard nut	[mN-m (oz-in)]		free wheeling				
Drag torque for anti-backlash nut	[mN-m (oz-in)]		3.5 (0.5)				
Dynamic load capacity for standard nut	[N (lbf)]	8.9 (2)	22.2 (5)	44.5 (10)			
Dynamic load capacity for anti-backlash nut	[N (lbf)]	4.4 (1)	11.1 (2.5)	22.2 (5)			
Min. life for standard nut (3)	[revs]		200 Million				
Min. life for anti-backlash nut (4)	[revs]		100 Million				
Max. temperature	[°C (°F)]		82 (180)				
Coefficient of friction (5)			0.12 - 0.16				
Efficiency	%		37 – 79 ⁽⁶⁾				
Max. axial backlash for standard nut	[mm (in)]	0.058 (0.0023)	0.058 (0.0023)	0.064 (0.0025)			
Max. axial backlash for anti-backlash nut	[mm (in)]		0				
Positional repeatability for standard nut	[mm (in)]	0.013 - 0.058 (0.0005 - 0.0023)	0.013 - 0.058 (0.0005 - 0.0023)	0.013 - 0.064 (0.0005 - 0.0025)			
Positional repeatability for anti-backlash nut	[mm (in)]	< 0.013 (0.0005)					
Material			bearing grade PEEK				

Max screw length does not include oversized journal or coupler.
 Faster speeds can be achieved but is not recommended. For optimal performance, speed should be under 500 RPM.
 Under nominal loads and speeds.
 With of anti-backlash nut is number of cycles until mechanism no longer fully takes up clearance between lead screw and nut threads.
 With dry lead screw. A lower coefficient of friction can be achieved by using grease or lubricants.
 Efficiency calculated assuming COF = 0.12.




Standard End Configurations

Faced End (A00)




Standard Journal (Jxx)

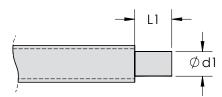

P/N Code	Dimensions [mi		Compatible Screws [mm]
0000	d1	L1	Corotto [mm]
J10	1.00/0.99 (0.0394/0.0390)	1.00 (0.039)	2, 3, 4
J20	2.00/1.99 (0.0787/0.0783)	3.00 (0.118)	3, 4
J25	2.50/2.49 (0.0984/0.0980)	3.00 (0.118)	4


Oversized Journal (Kxx)

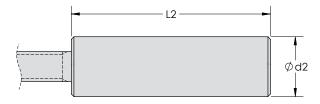

P/N	Dimensions [mi	m (in)]	Compatible
Code	d2	L2	Screws [mm]
K30	3.00/2.97 (0.118/0.117)	25.0 (0.98)	2
K40	4.00/3.97 (0.157/0.156)	25.0 (0.98)	2, 3
K50	5.00/4.97 (0.197/0.196)	25.0 (0.98)	2, 3, 4
K60	6.00/5.97 (0.236/0.235)	25.0 (0.98)	2, 3, 4
K70	7.00/6.97 (0.276/0.275)	25.0 (0.98)	2, 3, 4

For custom end machining or end configurations, please contact Thomson Customer Support.

Integrated Coupler (Cxx)

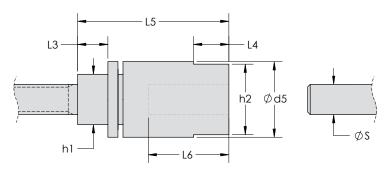

P/N	Bore	Lead				Dimensio	ons [mm (in)]			
Code	Size [mm]	Screw [mm]	d5	h1	h2	L3	L4	L5	S ¹	L6 ² MAX
		2	6.00 (0.236)	4.00 (0.157)	5.50 (0.217)			445 (057)	4 500 / 4 400	9.00 (0.35)
C15	Ø1.5	3	6.50 (0.256)	5.00 (0.197)	6.00 (0.236)	3.00 (0.118)	3.50 (0.138)	14.5 (0.57) MAX	1.500 / 1.490 (0.0591 / 0.0587)	8.00 (0.31)
		4	7.00 (0.276)	5.50 (0.217)	6.50 (0.256)			IVIZV	(0.0001)	7.00 (0.28)
		2		4.00 (0.157)						9.50 (0.37)
C20	Ø2.0	3	6.50 (0.256)	5.00 (0.197)	6.00 (0.236)	3.00 (0.118)	3.50 (0.138)	15.0 (0.59) MAX	2.000 / 1.990 (0.0787 / 0.0783)	8.50 (0.33)
		4		5.50 (0.217)				IVIAA	(0.0707 / 0.0700)	7.50 (0.3)
		2		4.00 (0.157)						10.00 (0.39)
C30	Ø3.0	3	7.50 (0.295)	5.00 (0.197)	7.00 (0.276)	3.00 (0.118)	3.50 (0.138)	15.5 (0.61) MAX	3.000 / 2.990 (0.1181 / 0.1177)	9.00 (0.35)
		4		5.50 (0.217)				IVIAA	(0.1101 / 0.1177)	8.00 (0.31)
		2		4.00 (0.157)				45 5 (0.04)		10.00 (0.39)
C40	Ø4.0	3	8.50 (0.335)	5.00 (0.197)	8.00 (0.315)	3.00 (0.118)	3.50 (0.138)	15.5 (0.61) MAX	4.000 / 3.988 (0.1575 / 0.157)	9.00 (0.35)
		4		5.50 (0.217)				IVIAA	(0.13/3 / 0.13/)	8.00 (0.31)
C50	Ø5.0	4	9.50 (0.374)	6.00 (0.236)	9.00 (0.354)	3.00 (0.118)	3.50 (0.138)	15.5 (0.61) MAX	5.000 / 4.988 (0.1969 / 0.1964)	8.00 (0.31)

S = Recommended mating shaft diameter for optimal coupling. Recommended shaft diameter tolerance = h7.
 L6 = Max insertion depth of shaft (S).
 For required lock nut torques and installation instructions, see page 21.



Miniature Lead Nuts

Flange Mount / Standard Backlash






- The smallest Thomson flange mount nuts available.
- Injection-molded in a high-performance, bearinggrade material, specifically designed for demanding applications.



- For lead screw diameters of 2, 3 and 4 mm.
- Design loads of up to 10 lbf (44 N).

Dimensions and Specifications

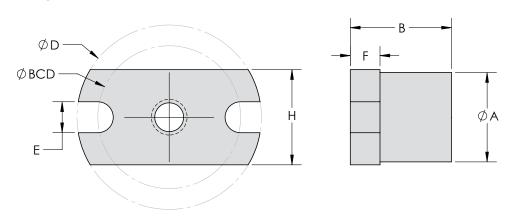

Full)imensi	ons [mr	m (in)]				Max.	Max.	Drag	Efficiency (2)
P/N	Lead Screw Diameter [mm]	Lead	А	В	D	Е	F	Н	BCD	Dynamic Load [N (lbf)]	Screw Speed [RPM]	Torque [mN-m (oz-in)]	[%]
MSF2038		0.375 (0.015)											36.6
MSF2075	2	0.75 (0.030)	5.3	7.0	11.9	1.93/1.80	2.0	5.8	8.89	8.9	1000 (1)	Free	53.0
MSF2150	Z	1.50 (0.059)	(0.21)	(0.28)	(0.47)	(0.076/0.071)	(80.0)	(0.23)	(0.350)	(2)	1000 ***	Wheeling	67.7
MSF2300		3.00 (0.118)											76.8
MSF3050		0.50 (0.020)											33.4
MSF3100	3	1.00 (0.039)	7.5	8.5			2.5 (0.10)			22.2	1000 (1)	Wheeling O00 (1) Free Wheeling	49.6
MSF3300	J	3.00 (0.118)	(0.30)	(0.34)						(5)	1000 ***		72.0
MSF3600		6.00 (0.236)											78.4
MSF4100		1.00 (0.039)	0.0	40.0	40.0	0.05/0.00	0.0	40.0	45.04	44.5		F	43.7
MSF4400	4	4.00 (0.157)	9.0 (0.35)	10.3 (0.40) (19.0 (0.75)	3.05/2.90 (0.120/0.114)	3.0 (0.12)	10.3 (0.40)			1000 (1)	Free Wheeling	72.5
MSF4800		8.00 (0.315)	(0.00)	(0.40)	(0.73)	(0.120/0.114)	(0.12)	(0.40) (0.000)		(10)		TTHEOTHY	78.5

^{1.} For optimal performance, speed should be limited to 500 RPM. 2. Efficiency calculated assuming a COF of 0.12.

Flange Mount / Anti-Backlash






- The smallest Thomson anti-backlash nuts available.
- Injection-molded in a high-performance, bearinggrade material, specifically designed for demanding applications.



- For lead screw diameters of 2, 3 and 4 mm.
- Design loads of up to 5 lbf (22 N).

Dimensions and Specifications

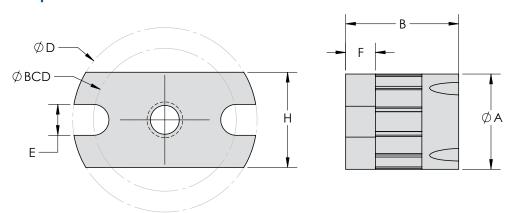

Full			Dimensions [mm (in)]							Max.	Max.	Drag	Efficiency (2)
P/N	Lead Screw Diameter [mm]	Lead	А	В	D	E	F	Н	BCD	Dynamic Load [N (lbf)]	Screw Speed [RPM]	Torque [mN-m (oz-in)]	[%]
MAF2038		0.375 (0.015)											36.6
MAF2075	2	0.75 (0.030)	5.8	7.8 (0.31)	11.9	1.93/1.80	2.0	5.8	8.89	4.4	1000 (1)	3.5 (0.5)	53.0
MAF2150	۷.	1.50 (0.059)	(0.23)	MAX	(0.47)	(0.076/0.071)	(0.08)	(0.23)	(0.350)	(1)	1000 ***	MAX	67.7
MAF2300		3.00 (0.118)		1417.01									76.8
MAF3050		0.50 (0.020)											33.4
MAF3100	3	1.00 (0.039)	8.0	9.9 (0.39)	15.5	2.74/2.59	2.5	8.0	11.99	11.1	1000 (1)	3.5 (0.5)	49.6
MAF3300	J	3.00 (0.118)	(0.32)	(0.39) MAX	(0.61)	(0.108/0.102)	(0.10)	(0.32)	(0.472)	(2.5)	1000 ***	MAX	72.0
MAF3600		6.00 (0.236)											78.4
MAF4100		1.00 (0.039)	40.0	12.4	40.0	0.05/0.00	0.0	40.0	45.04	00.0		0.5.(0.5)	43.7
MAF4400	4	4.00 (0.157)	10.3 (0.40)	10.3	19.0 (0.75)	3.05/2.90 (0.120/0.114)	3.0 (0.12)	10.3	15.24 (0.600)	22.2 (5)	1000 (1)	3.5 (0.5) MAX	72.5
MAF4800		8.00 (0.315)	(0.10)	MAX	(0.70)	(0.120/0.111)	(0.12)	(0.10)	(0.000)	(3)		141, 01	78.5

1. For optimal performance, speed should be limited to 500 RPM. 2. Efficiency calculated assuming a COF of 0.12.



Miniature Lead Nuts

Thread Mount / Standard Backlash







- Metric thread mount lead nut.
- Manufactured from a high-performance, bearinggrade material, specifically designed for demanding applications.



- For lead screw diameters of 2, 3 and 4 mm.
- Design loads of up to 10 lbf (44 N).

Dimensions and Specifications

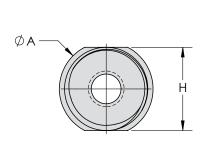

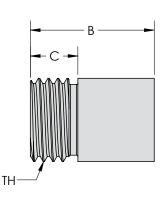

Full			Dimens	sions [mm	(in)]			Max.	Max.	Drag	Efficiency (2)
P/N	Lead Screw Diameter [mm]	Lead	А	В	С	Н	TH	Dynamic Load [N (lbf)]	Screw Speed [RPM]	Torque [mN-m (oz-in)]	[%]
MST2038		0.375 (0.015)									36.6
MST2075	2	0.75 (0.030)	5.6	8.1	3.50	5.0	M5x0.8 -6q	8.9	1000 (1)	Free	53.0
MST2150	Δ	1.50 (0.059)	(0.22)	(0.32)	(0.138)	(0.20)	ivioxu.o -og	(2)	1000 ***	Wheeling	67.7
MST2300		3.00 (0.118)									76.8
MST3050		0.50 (0.020)	7.0	40.4	4.00	7.0		00.0		_	33.4
MST3100	3	1.00 (0.039)	7.9 (0.31)	10.4 (0.41)	4.00 (0.157)	7.0 (0.28)	M7x0.75 -6g	22.2 (5)	1000 (1)	Free Wheeling	49.6
MST3300		3.00 (0.118)	(0.01)	(0.11)	(0.107)	(0.20)		(0)		•••••••	72.0
MST4100		1.00 (0.039)	40.0	40.7	F 00	0.0		44.5		_	43.7
MST4400	4	4.00 (0.157)	10.2 (0.10)	12.7 (0.50)	5.00 (0.197)	9.0 (0.36)	M9x1.0 -6g	44.5 (10)	1000 (1)	Free Wheeling	72.5
MST4800		8.00 (0.315)	(3.10)	(0.00)	J.50) (0.187)			(10)		vviideiiiig	78.5

^{1.} For optimal performance, speed should be limited to 500 RPM. 2. Efficiency calculated assuming a COF of 0.12.

Compact Thread Mount / Standard Backlash




Features and Benefits


- The smallest Thomson standard lead nut ever manufactured.
- Compact version of the MST nut.
- For lead screw diameters of 2, 3 and 4 mm.



- Manufactured from a high-performance, bearinggrade material, specifically designed for demanding applications.
- Design loads of up to 5 lbf (22 N).

Dimensions and Specifications

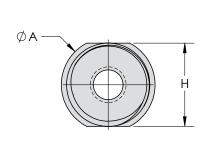

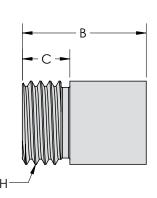


Full			Dimens	ions [mm	(in)]			Max.	Max.	Drag	Efficiency (2)
P/N	Lead Screw Diameter [mm]	Lead	А	В	С	Н	TH	Dynamic Load [N (lbf)]	Screw Speed [RPM]	Torque [mN-m (oz-in)]	[%]
MSC2038		0.375 (0.015)									36.6
MSC2075	2	0.75 (0.030)	4.0	6.0	3.00	3.5	Ma Evo e ex	4.4	1000 (1)	Free	53.0
MSC2150	Z	1.50 (0.059)	(0.16)	(0.24)	(0.118)	(0.14)	M3.5x0.6 -6g	(1)	1000 ***	Wheeling	67.7
MSC2300		3.00 (0.118)									76.8
MSC3050		0.50 (0.020)	F.0	0.4	0.50	F 0		0.0		-	33.4
MSC3100	3	1.00 (0.039)	5.6 (0.22)	8.1 (0.32)	3.50 (0.138)	5.0 (0.20)	M5x0.8 -6g	8.9 (2)	1000 (1)		49.6
MSC3300		3.00 (0.118)	(0.22)	(0.02)	(0.100)	(0.20)		(2)		VVIIcomig	72.0
MSC4100		1.00 (0.039)	7.0	10.4	4.00	7.0		00.0		F	43.7
MSC4400	4	4.00 (0.157)	7.9 (0.31)	10.4 (0.41)	4.00 (0.157)	7.0 (0.28)	M7x0.75 -6g	22.2 (5)	1000 (1)		72.5
MSC4800		8.00 (0.315)	(0.01)	(0.11)	(3.107)	(0.20)		(3)		TTHOUNING	78.5

^{1.} For optimal performance, speed should be limited to 500 RPM. 2. Efficiency calculated assuming a COF of 0.12.



Miniature Lead Screws

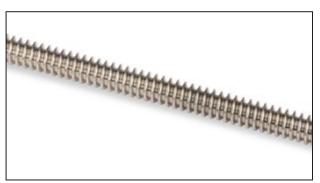

Features and Benefits

- New precision-grade lead screw in 2, 3 and 4 mm diameters
- Various lead options available
- Up to 150 mm length

Dimensions and Specifications

Major Diameter [mm]	Lead [mm (in)]	Part Number	Pitch [mm (in)]	No. Of Thread Starts	Accuracy [mm/mm (in/in)]	Material	Thread Direction	
	0.375 (0.015)	CM2038		1				
2	0.75 (0.030)	CM2075	0.375	2	0.0005	Stainless Steel	Dight Hand	
Z	1.50 (0.059)	CM2150	(0.015)	4	(0.0005)		Right Hand	
	3.00 (0.118)	CM2300		8				
	0.50 (0.020)	CM3050		1		Stainless Steel		
3	1.00 (0.039)	CM3100	0.5	2	0.0005		Dight Hand	
3	3.00 (0.118)	CM3300	(0.020)	6	(0.0005)		Right Hand	
	6.00 (0.236)	CM3600		12				
	1.00 (0.039)	CM4100		1				
4	4.00 (0.157)	CM4400	1 (0.039)	4	0.0005 (0.0005)	Stainless Steel	Right Hand	
	8.00 (0.315)	CM4800	(0.000)	8	(0.0003)			

For availability of all other lead screws, please see the standard Thomson lead screw catalog. For any custom diameter and/or leads, please contact Thomson customer support for more information.

Make it Yours — Customize Your Miniature Lead Screw

End Machining

Besides our standard end configurations, Thomson can machine many custom features onto our lead screws. Simply send over a drawing or provide guidance to one of our sizing specialists to review. Our machining options include flats, counterbores, internal /external hex, mounting threads and snap ring grooves.



Custom Lead Nuts and Assemblies

If our standard nut geometry or material is not suitable for your application,
Thomson can custom manufacture a solution, specially catered to you. Thomson has decades of experience making the most complex nut geometries and working with many different materials.



Coatings & Surface Treatments

Thomson can also specially treat our lead screws with many different coating and surface treatment options such as low friction PTFE coating, Dicronite, passivation, electropolish, and heat treating.

Other possible customizations can include the following:

- Diameters and leads
- End support and bearing assemblies
- Thread forms
- Motorized assemblies
- Screw material and hardness

Start your custom solution journey now by contacting Thomson and we'll set you up with one of our experienced engineers.




Engineering Guidelines

Column Loading Capacities Chart for Miniature Lead Screws

Use the chart below to determine the maximum compression load for the lead screw. Usually, lead screws operated in tension can handle loads up to the rated capacity of the lead nut, provided the screw length is within standard lengths. However, end supports need to be accounted for as well because they can have an effect on the load capacity of the screw. The four most common loading variations are shown below with corresponding rating adjustments. Find the point of intersecting lines of load and length to determine the smallest screw diameter that would suffice in a given application.

Warning: DO NOT EXCEED nut capacity. Curves for the screw diameters shown are based on the smallest root (minor) diameter of the standard screws within the nominal size range.

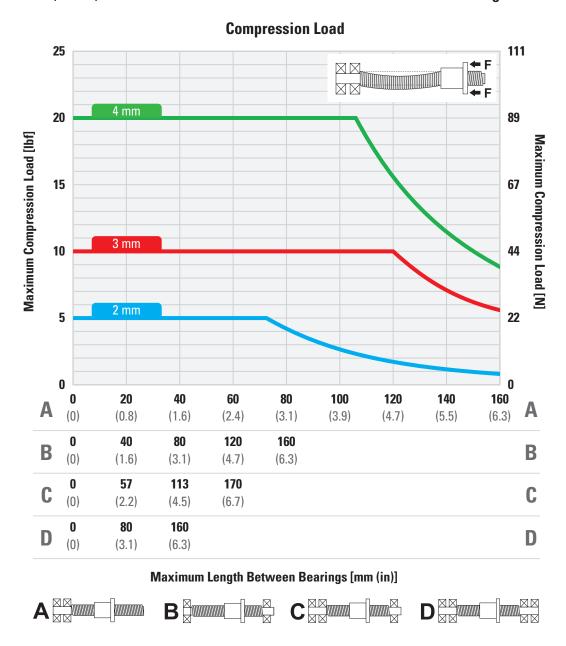

Lead Screw Formulas

TORQUE, ROTARY TO LINEAR

Rotating the lead screw to translate the nut or rotating the nut to translate the lead screw.

Torque =
$$\frac{\text{Load x Lead}}{2\pi \text{ x Efficiency}}$$

TORQUE, LINEAR TO ROTARY

Translating the lead screw to rotate the nut or translating the nut to rotate the screw.

Torque =
$$\frac{\text{Load x Lead x Efficiency}}{2\pi}$$

EFFICIENCY

% Efficiency =
$$\frac{\text{Tan (Helix Angle)}}{\text{Tan (Helix Angle + Arctan f)}} \times 100$$

f = coefficient of friction

Systems with an efficiency of 50% and greater are not self-locking. For efficiency, see appropriate lead nut sections on pages 12-15. The efficiencies listed in the brochure are calculated for a coefficient of friction of 0.1.

COLUMN LOAD STRENGTH* (Max compression load on screw)

$$P_{cr} = \frac{1.405 \times 10^7 \times F_c \times d^4}{L^2}$$

P_{cr} = maximum loads (lbs)

 F_{s} = end support factor

0.25 one end fixed, other free

1.00 both ends supported

2.00 one end fixed, other supported

4.00 both ends fixed

d = root diameter of screw (in.)

L= distance between nut and load carrying bearing (in) When possible, design for tension loads to eliminate the buckling factor and reduce the required screw size.

CRITICAL SCREW SHAFT SPEED (Max rotational speed of screw)

$$C_s = F_c \times 4.76 \times 10^6 \times \frac{d}{1^3}$$

C_s = critical speed (rpm)

d = root diameter of screw (in.)

L = length between supports (in.)

 F_c = end support factor

0.36 one end fixed, other free

1.00 both ends supported

1.47 one end fixed, other supported

2.23 both ends fixed

Critical shaft speed should be reduced to 80% to allow for other factors such as alignment and straightness.

^{*} Formula only valid if L/d ≥ 18.25



Installation Overview

For optimal performance and component life, proper installation of miniature lead screw assemblies is required. Careful consideration must be taken when it comes to nut/end configuration selection, mounting supports and installation alignment. The following diagrams outline the general procedure for properly installing a miniature lead screw and nut assembly into your system.

1. Mount Miniature Lead Screw

Install miniature lead screw onto end supports, ensuring good concentricity between machined surfaces on lead screw and support bearings.

2. Mount Miniature Lead Nut


Install miniature lead nut onto guided carriage. Ensure that lead nut stays concentric to lead screw, and flange/thread mount faces remain perpendicular to lead screw when fastening down. Manually move carriage back and forth over the stroke of the lead screw to check for excessive resistance and confirm proper mounting.


3. Install Motor or Drive Mechanism


Couple motor or other drive mechanism to lead screw. Ensure rotational axis is concentric to lead screw or coupler compensates for misalignment.


4. Complete Installation

Manually rotate screw and translate carriage throughout entire stroke length of screw to ensure everything is properly aligned and there are no areas with high amounts of resistance. Once confirmed, tighten down all fasteners to specification. Installation is complete.

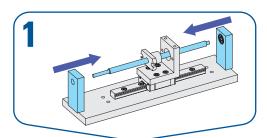

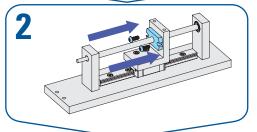

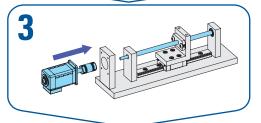

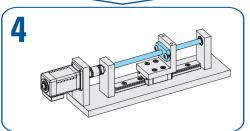

Integrated Coupler Installation

For customers requiring a quick, simple, and effective way of installing a miniature lead screw into their assembly, Thomson's new integrated coupler can be utilized. A basic installation guide and install specifications can be found in the following sections. For more detailed installation instructions, please contact Thomson.





With lock nut loosened up, slide Integrated Coupler on to mating shaft. Ensure mating shaft is inserted in to integrated coupler to a depth of at least 2X the shaft diameter.




With the two appropriate wrenches, tighten lock nut to appropriate torque specification as outlined in table below.



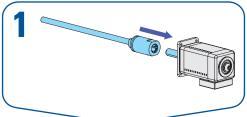

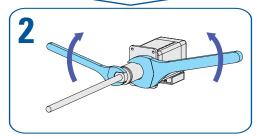

Installation Specifications

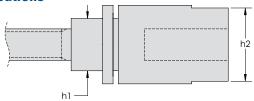



P/N Code	Bore Size	Lead Screw [mm]		ch Size m]	Mating Shaft Diameter [mm (in)]	Required Lock Nut Torque [N-m (in-lbf)]
	[mm]		h1	h2	S	
		2	4	5.5	4.500.74.400	
C15	Ø1.5	3	5	6	1.500 / 1.490 (0.0591 / 0.0587)	4 (35)
		4	5.5	6.5	(0.0001 / 0.0007 /	
		2	4			
C20	Ø2.0	3	5	6	2.000 / 1.990 (0.0787 / 0.0783)	4 (35)
		4	5.5		(0.0707 / 0.0703)	
		2	4		2,000,72,000	
C30	Ø3.0	3	5	7	3.000 / 2.990 (0.1181 / 0.1177)	4 (35)
		4	5.5		(0.1101 / 0.1177)	
		2	4		4.000 / 2.000	
C40	Ø4.0	3	5	8	4.000 / 3.988 (0.1575 / 0.157)	4 (35)
		4	5.5		(0.1.0.0)	
C50	Ø5.0	4	6	9	5.000 / 4.988 (0.1969 / 0.1964)	4 (35)



Lubrication



Overview

Thomson-branded Trigel 1200SC grease lubrication is ideal for applications requiring lower friction, higher efficiency, reduced noise or increased life. This high-quality lubricant was specially formulated to improve the overall performance of lead screw and nut assemblies as needed.

Specifications				
Part number	TRIGEL1200SC-1CC			
Main components	Synthetic oil, PTFE			
About	 Increases lead nut efficiency and life Minimal friction change with increased temperature Lowers starting torque Compatible with reactive chemicals Compatible with clean room and high vacuum applications 			
Loaded material	Plastic nut on metal lead screw			
Mechanical load	Light / Medium			
Coefficient of friction	0.06 - 0.08			
Max. temperature	250 °C (482 °F)			
Vapor pressure	1 x 10^6 Pa			
Relubrication frequency (1)	500,000 inches of travel or 3-4 months (whichever comes first)			
Packaging (2)	1 cc pipette			

^{1.} General guidance only. Re-lubrication intervals are highly dependent on application. Testing should be conducted to determine proper frequency. Screws may require lubrication frequently depending on both environmental and operating conditions. If the lubricant appears to be dispersed before this point or has become dry, the maintenance interval should be more frequent.
2. Other packaging sizes available - contact Thomson for more information.


Note: Other grease options available - contact Thomson for more information

Online Resources

Thomson offers a wide variety of online application, selection and training tools to help you in the lead screw selection process. An experienced team of engineers is also available to help size and select a lead screw to best fit your application needs. To explore additional technical resources and options, contact customer support at www.thomsonlinear.com/cs.

Lead Screws on the Web

Find additional information and learn more about lead screws on this content-rich web page. https://www.thomsonlinear.com/en/products/lead-screws#overview

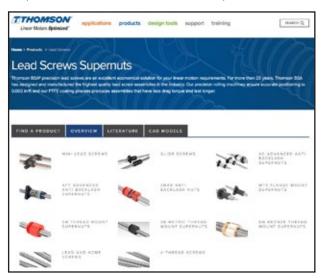

Interactive 3D CAD Models

Download free interactive 3D CAD models in the most common CAD formats.

https://www.thomsonlinear.com/en/products/leadscrews#drawings





Selector Tool

This tool greatly simplifies the tasks of searching and selecting with a visual selection process that immediately narrows down your lead screw options. https://www.thomsonlinear.com/ls



EUROPE

United Kingdom

Thomson Caddsdown Blue Caddsdown Business Park Bideford EX39 3GB

Phone: +44 1271 334 500

E-mail: sales.europe@thomsonlinear.com

Germany

Thomson

Nürtinger Straße 70 72649 Wolfschlugen Phone: +49 7022 504 403 Fax: +49 7022 504 405

E-mail: sales.europe@thomsonlinear.com

France

Thomson

Phone: +33 243 50 03 30

E-mail: sales.europe@thomsonlinear.com

Italy

Thomson

Via per Cinisello 95/97 20834 Nova Milanese (MB) Phone: +39 0362 366406 Fax: +39 0362 276790

E-mail: sales.italy@thomsonlinear.com

Sweden

Thomson Estridsväg 10 29109 Kristianstad Phone: +46 44 590 2400 Fax: +46 44 590 2585

E-mail: sales.europe@thomsonlinear.com

USA, CANADA and MEXICO

Thomson

203A West Rock Road Radford, VA 24141, USA Phone: +1 540 633 3549 Fax: 1 540 633 0294

E-mail: thomson@thomsonlinear.com Literature: literature.thomsonlinear.com

ASIA

Asia Pacific

Thomson

E-mail: sales.apac@thomsonlinear.com

China

Thomson

Rm 805, Scitech Tower 22 Jianguomen Wai Street

Beijing 100004

Phone: +86 400 606 1805 Fax: +86 10 6515 0263

E-mail: sales.china@thomsonlinear.com

India

Kollmorgen – Div. of Altra Industrial Motion India Private Limited Unit no. 304, Pride Gateway, Opp. D-Mart,

Opp. D-Iviait,

Baner Road, Pune, 411045

Maharashtra

Phone: +91 20 67349500

E-mail: sales.india@kollmorgen.com

South Korea

Thomson

3033 ASEM Tower (Samsung-dong)

517 Yeongdong-daero

Gangnam-gu, Seoul, South Korea (06164)

Phone: + 82 2 6001 3223 & 3244

E-mail: sales.korea@thomsonlinear.com

SOUTH AMERICA

Brasil

Thomson

Av. João Paulo Ablas, 2970

Jardim da Glória - Cotia SP - CEP: 06711-250

Phone: +55 11 4615 6300

E-mail: sales.brasil@thomsonlinear.com